


MACK CXU-613


GY-1211-16

Mounting Instructions

Step 1: Remove Factory Bumper (Factory Brackets Shown

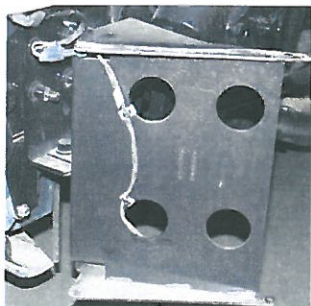

Factory Brkt Front View

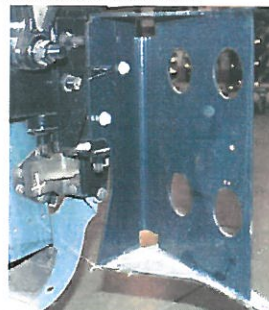

Factory Brkt Rear View



Step 2: Put Premium Replacement bumper on and tighten
(Reuse factory brackets and hardware)