



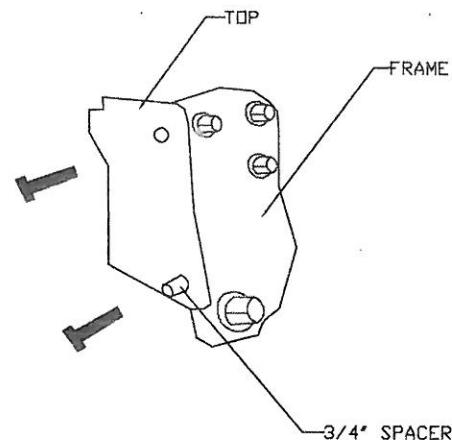

2004 GMC-C4500  
DI-1001-25 MOUNTING

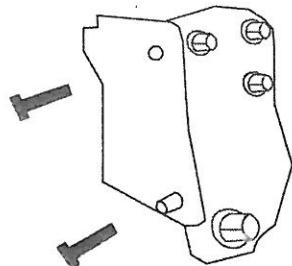

1. Remove front bumper.
2. Install new chrome bumper.
3. Set bumper on frame and line up top two bolts.
4. Hand tighten top bolts.
5. Install 3/4" spacers, bolts, hand tighten.
6. Adjust bumper to fit.
7. DO NOT USE IMPACT TO TIGHTEN BOLTS.